


## SECTION G - BODY II

### HEAT SHIELDS

The (optional) heat exhaust heat shields help to keep heat off of the footboxes. Assemble the left and right pieces as shown.

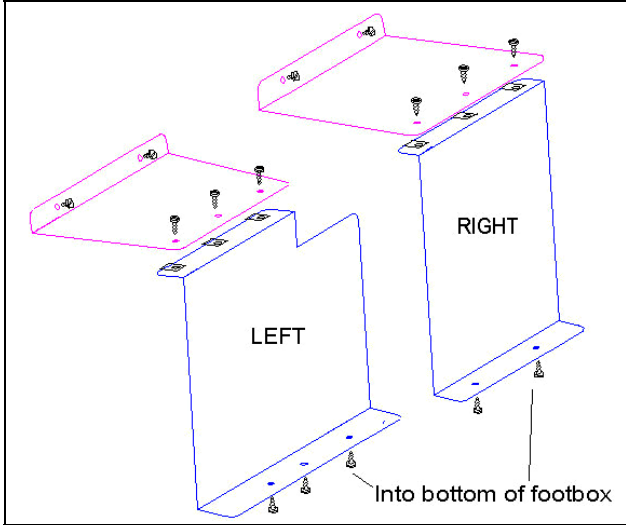

Holding each top and vertical assembly in place, mark the aluminum wheelhouse for the upper holes and drill for the #10 screws ( $\frac{1}{64}$ ""). Attach the upper pieces with screws, then drill through the bottom holes into the footboxes for the #6 screws (#30 drill).

